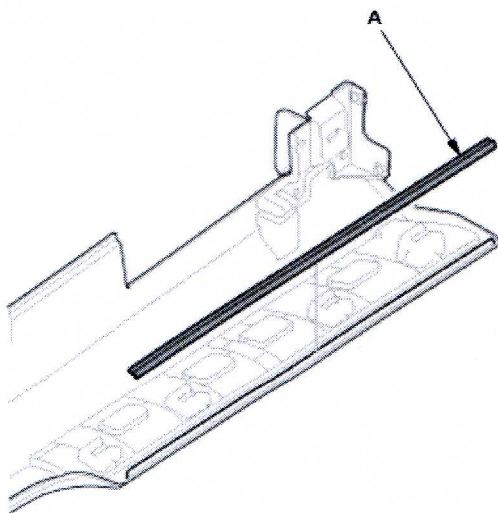
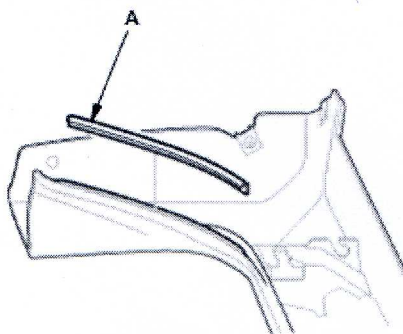
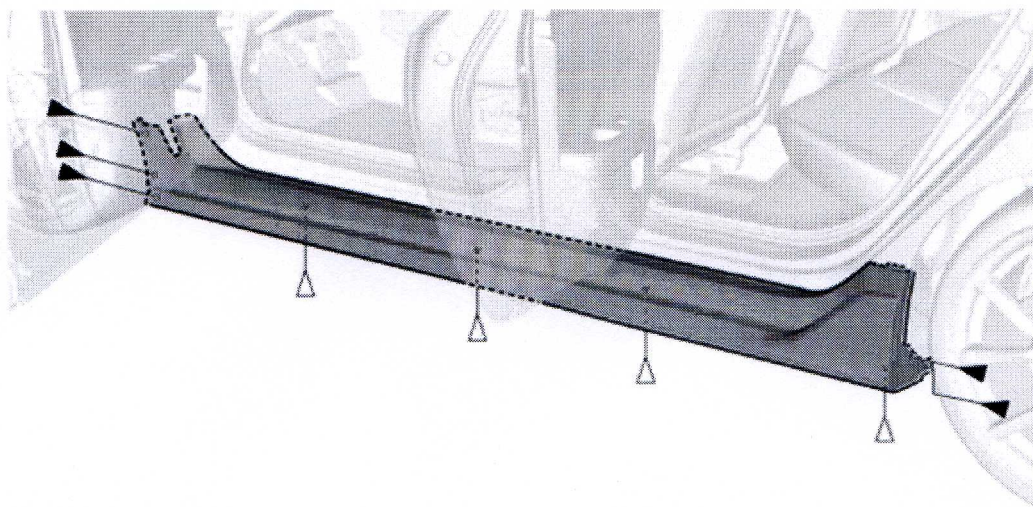


**2-door**

5. If necessary, remove the side sill panel lip seal (A).

**4/5-door****Side Sill Panel (Type-R)****1. Side Sill Panel - Remove**


1. Remove the screws (A) and the clips (B).

**Fastener Locations****A ▶ : 5****B ▶ : 4**

2. Open the front door and the rear door.
3. Slide the side sill panel (A) forward to remove it.


**Fastener Locations**

B ▷ : 11

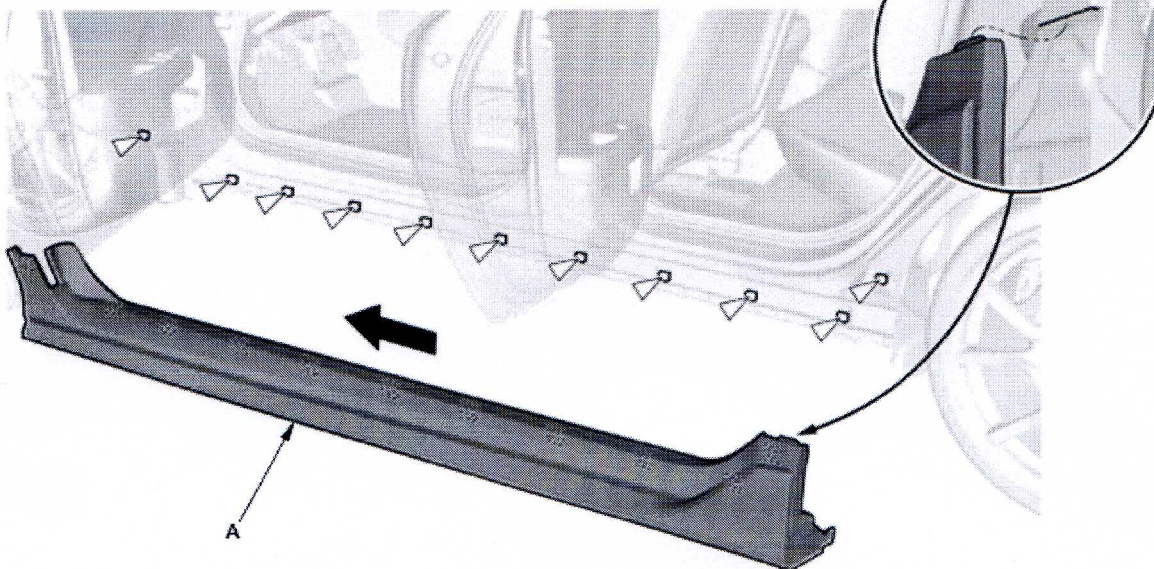

4. Remove the clips (B) from the body by turning them 45 °, then install them to the side sill panel.


5. If necessary, remove the side sill panel lip seal (A).

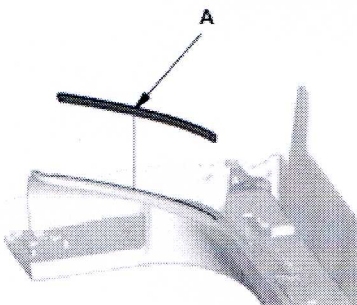**Side Sill Panel Support (For Some Models)****1. Rear Strake - Remove**



2. Side Sill Panel - Remove (Except Type-R)

3. Side Sill Panel Support - Remove

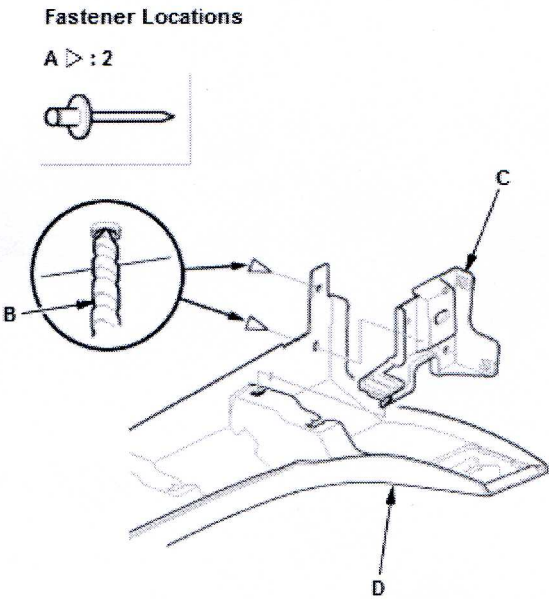

**⚠ WARNING**

Wear goggles or safety glasses to prevent eye injury.


1. Drill out the rivets (A) with a drill (B), then remove the side sill panel support (C) from the side sill panel (D).

Installation

Side Sill Panel (Except Type-R)

1. Side Sill Panel - Install

2-door

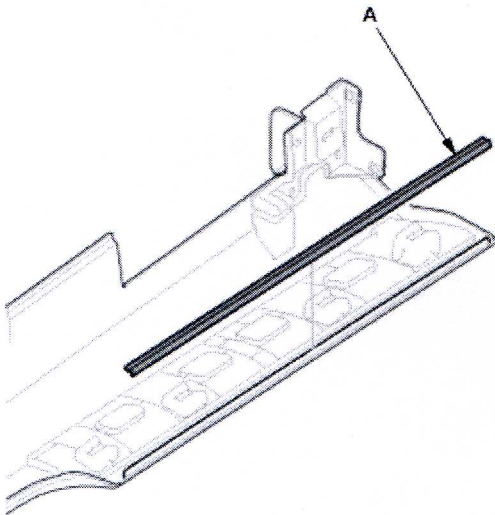


4/5-door

1. Install the side sill panel lip seal (A).

NOTE : If you are reusing the side sill panel lip seal, apply the adhesive primer to the area where the new double-sided adhesive tape will be applied, then attach the new double-sided adhesive tape to the side sill panel lip seal.


Adhesive tape requirements		
2-door:	Thickness	0.4 mm (0.016 in)
	Width	6 mm (0.24 in)
	Length	518 mm (20.39 in)
4/5-door:	Thickness	0.4 mm (0.016 in)
	Width	4 mm (0.16 in)
	Length	147 mm (5.79 in)

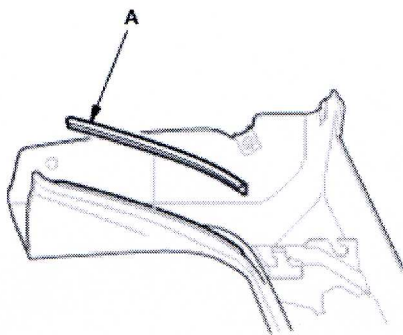

2. Hold up the side sill panel (A), and fit the clips (B) into the holes in the body, then push on the side sill panel until the clips snap into place.

**Fastener Locations**

B ▷ : 11

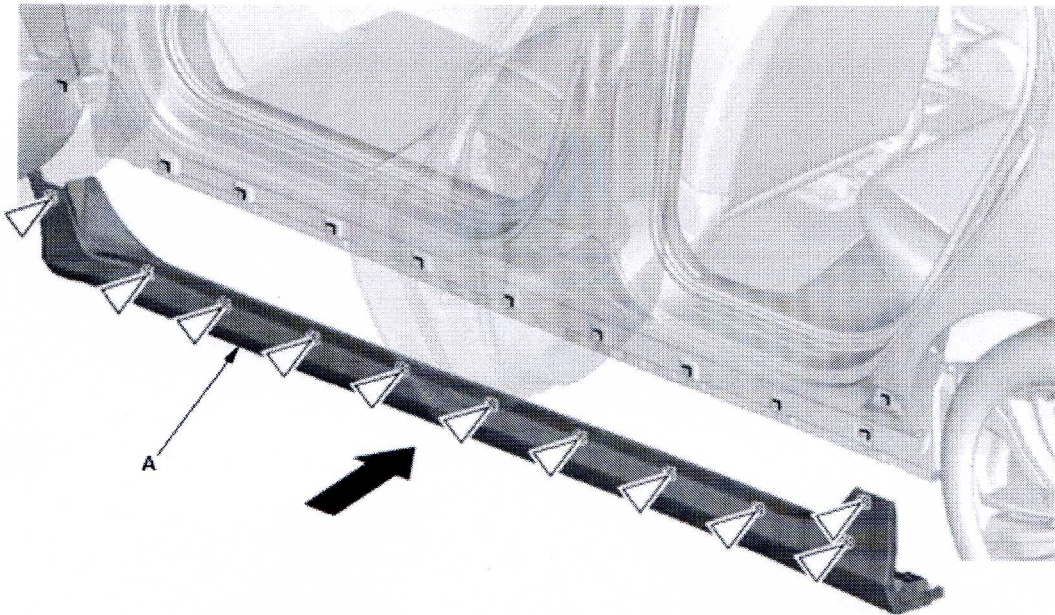

This illustration shows 4-door.

3. Install the clips (A) and the screws (B).




Fastener Locations

A ▶ : 4      B ▶ : 5 or 4



Without front splash guard

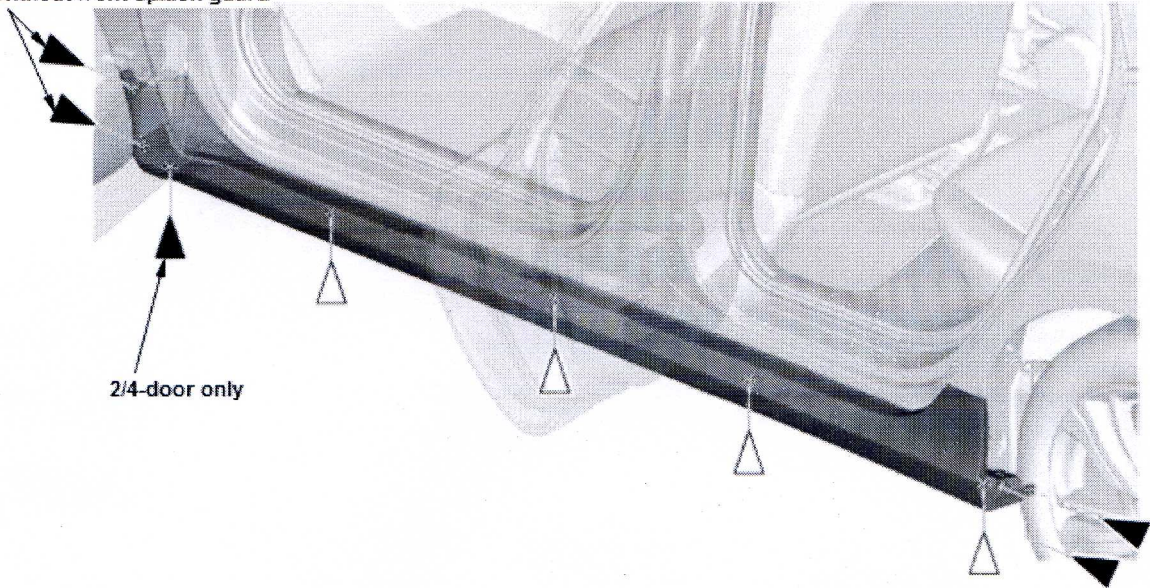


This illustration shows 4-door.

2. Front Splash Guard - Install (Canada Models)

Side Sill Panel (Type-R)

1. Side Sill Panel - Install

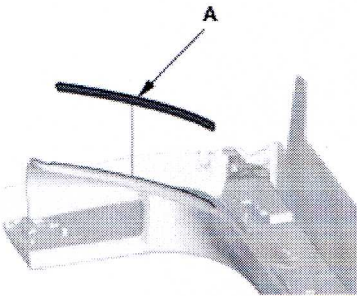

1. Install the side sill panel lip seal (A).


NOTE : If you are reusing the side sill panel lip seal, apply the adhesive primer to the area where the new double-sided adhesive tape will be applied, then attach the new double-sided adhesive tape to the side sill panel lip seal.

Adhesive tape requirements	Thickness	0.4 mm (0.016 in)
	Width	4 mm (0.16 in)
	Length	137 mm (5.39 in)

2. Hold up the side sill panel (A), and fit the clips (B) into the holes in the body, then push on the side sill panel until the clips snap into place.




**Fastener Locations**

B ▷ : 11

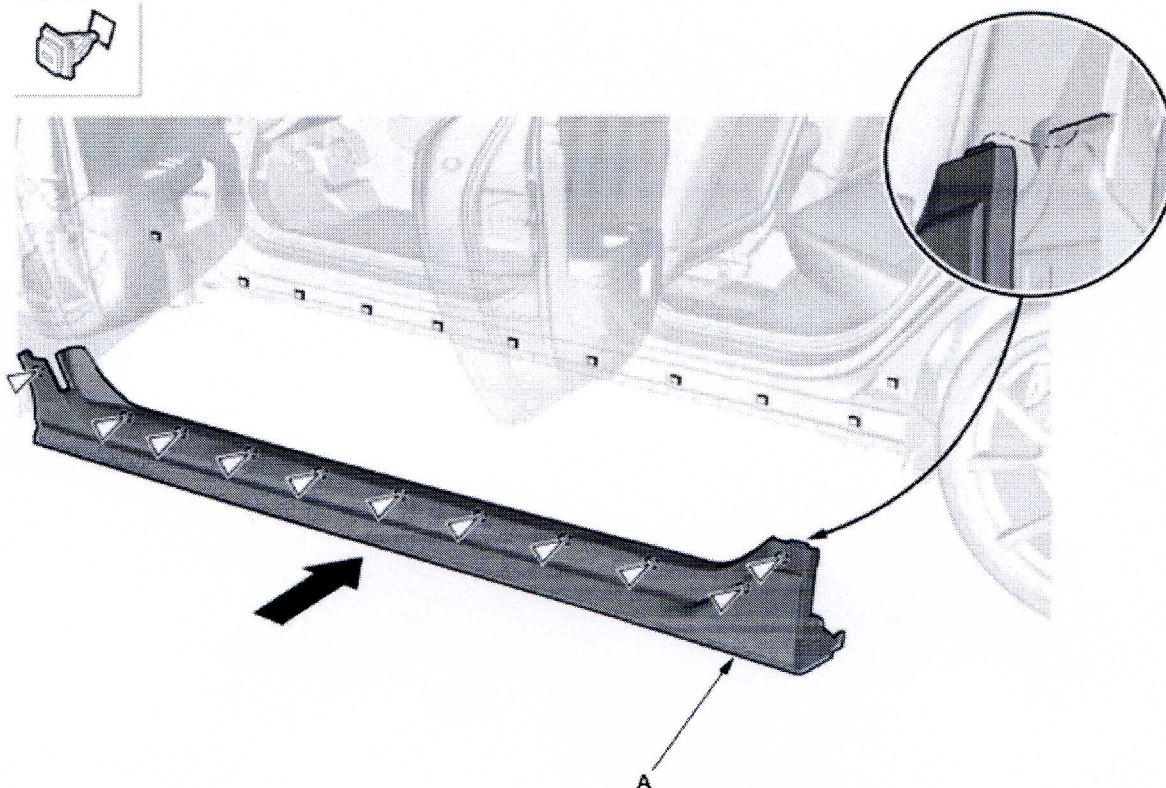

 3. Install the screws (A) and the clips (B).

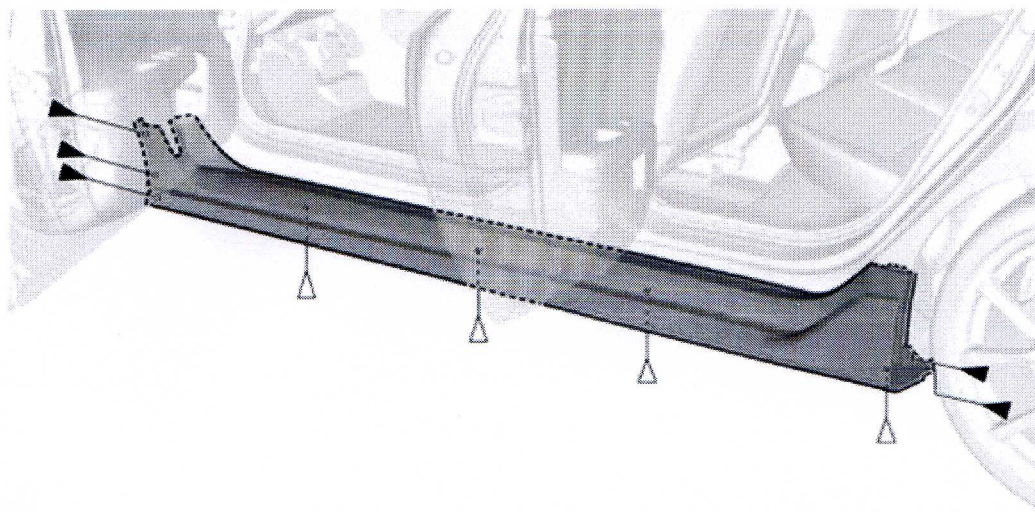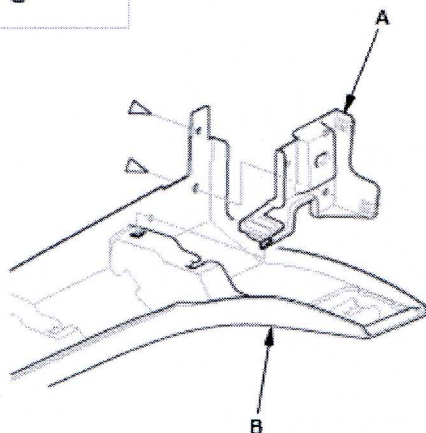

**Fastener Locations****A ▶ : 5****B ▶ : 4****Side Sill Panel Support (For Some Models)****1. Side Sill Panel Support - Install****Fastener Locations****C ▶ : 2**

1. Install the side sill panel support (A) to the side sill panel (B) with the new rivets (C).

**2. Side Sill Panel - Install (Except Type-R)**