


PRO DESIGN SIDE MARKERS – 10TH GEN CIVIC

Wiring Guide for 10th Gen Civic LED Side Markers

HAVE THE MARKERS ONLY LIGHT UP WHITE

- ☐ Simply connect the LED Side Marker Plug with the black and red leads in place of the OEM Bulb on the chassis harness.
- ☐ The loose Red Wire is not used so feel free to clip it or bundle it up to the side.

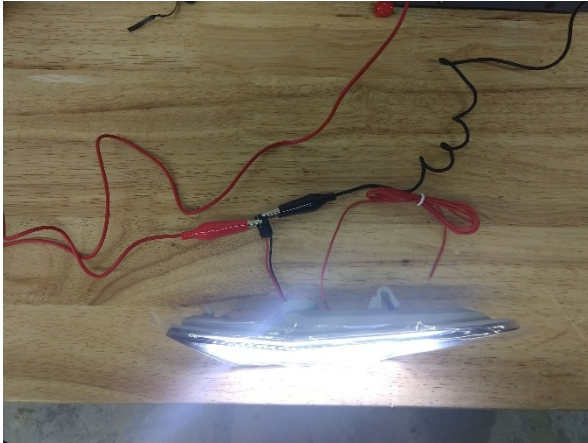

HAVE THE MARKERS ONLY LIGHT UP AMBER

- ☐ Connect the LED Side Marker Plug with the black and red leads in place of the OEM Bulb on the factory chassis harness.
- ☐ Using the Quick Splice included with the PRO Design Side Markers, connect the loose Red Wire to the Positive Red Wire going to the LED Side Marker Plug.
 - For information on how to use a Quick Splice, do a quick search on YouTube University.

HAVE THE MARKERS LIGHT UP WHITE, AND BLINK AMBER WHEN THE TURN SIGNAL INDICATOR IS ON

- ☐ Connect the LED Side Marker Plug with the black and red leads in place of the OEM Bulb on the factory chassis harness.
- ☐ Using the Quick Splice included with the PRO Design Side Markers, connect the loose Red Wire to the Positive Wire on the Turn Signal Bulb found on the Headlight Assembly.
 - For information on how to use a Quick Splice, do a quick search on YouTube University.

